









# Инструкция по монтажу поворотных на 360° обувных секций


## 1. Комплектующие

|                                                                                                |                                                                                                  |                                                                                                 |                                                                                                                                                                                 |                                                                                                |                                                                                                                                                                                  |                                                                                                   |                                                                                                   |                                                                                                   |
|------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
| A. (1шт.)<br> | B. (1шт.)<br>   | C. (1шт.)<br>  | D. (2шт.)<br>                                                                                  | E. (1шт.)<br> | F. (1шт.)<br>                                                                                  | G. (2 шт.)<br> | H. (2 шт.)<br> | I. (2 шт.)<br> |
|                                                                                                | J. (10 шт.)<br> | K. (3 шт.)<br> | L.<br><br>4 яруса 4 шт<br>6 ярусов 6 шт<br>8 ярусов 8 шт<br>10 ярусов 10 шт<br>12 ярусов 12 шт |                                                                                                | M.<br><br>4 яруса 4 шт<br>6 ярусов 6 шт<br>8 ярусов 8 шт<br>10 ярусов 10 шт<br>12 ярусов 12 шт |                                                                                                   | N. (2 шт.)<br> | O. (4 шт.)<br> |




## 2. Размер шкафа

Размер шкафа


| Ярусы | Поз. №   | Ш мм | Г мм | В мм      |
|-------|----------|------|------|-----------|
| 4     | ZG10A-01 | 800  | 420  | 790-990   |
| 6     | ZG10A-02 | 800  | 420  | 1070-1270 |
| 8     | ZG10A-03 | 800  | 420  | 1350-1550 |
| 10    | ZG10A-04 | 800  | 420  | 1630-1830 |
| 12    | ZG10A-05 | 800  | 420  | 1910-2110 |

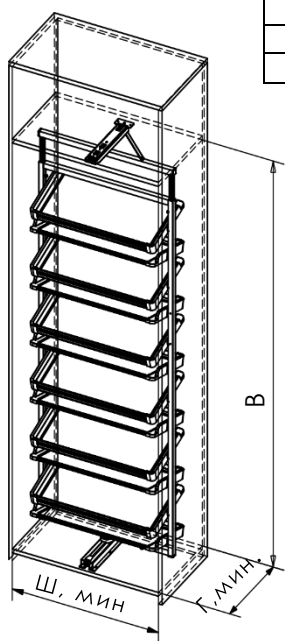

## 3. Порядок крепления

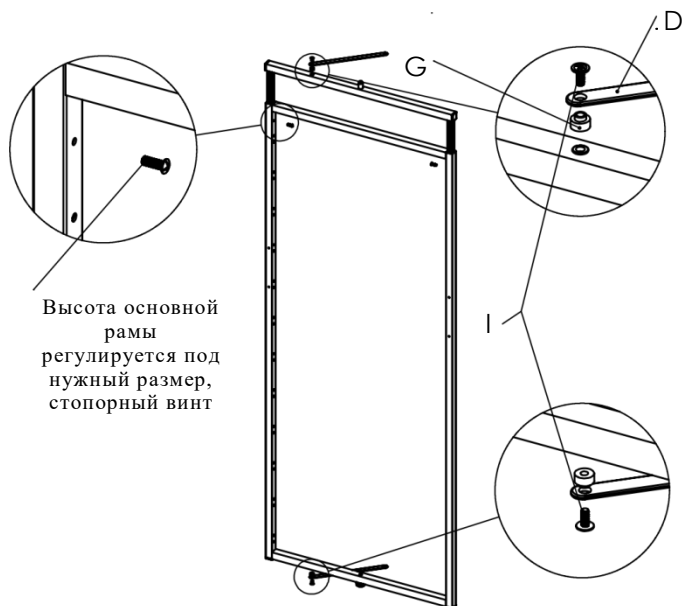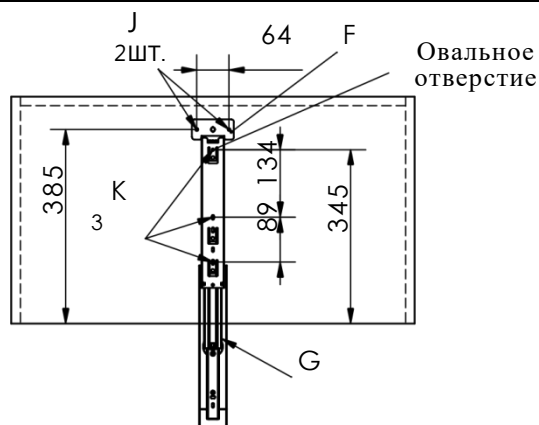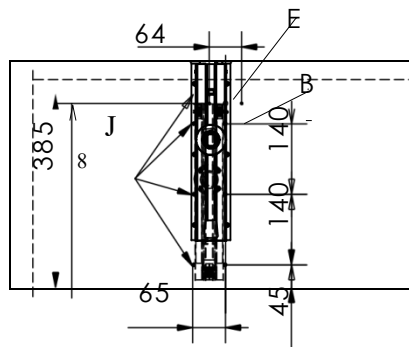

Высота основной рамы регулируется под нужный размер, стопорный винт

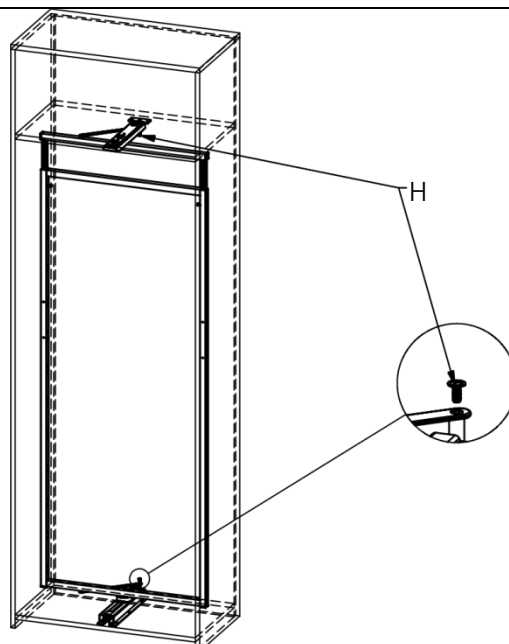

## Инструкция по монтажу поворотных на 360° обувных секций

### 4. Порядок крепления

